



Disassembling Canon PowerShot S80 Outer Casing

Tools used in this guide

- [Phillips #00 Screwdriver](#)



Step 1 - Outer Casing

- Remove the knot on the wrist lanyard.
- Remove the battery and memory card.






Step 2


- Remove all screws from sides of outer casing.
- Begin removing the screws on the bottom of the outer casing.
- Remove the rest of the screws from the outer casing.



Step 3

- Gently pull the front cover off the camera.

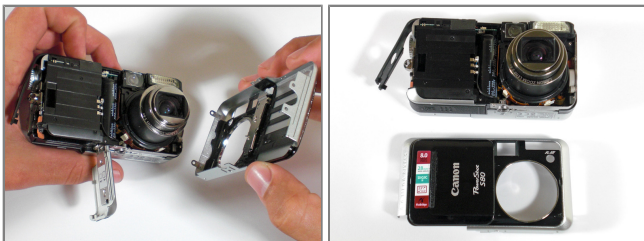

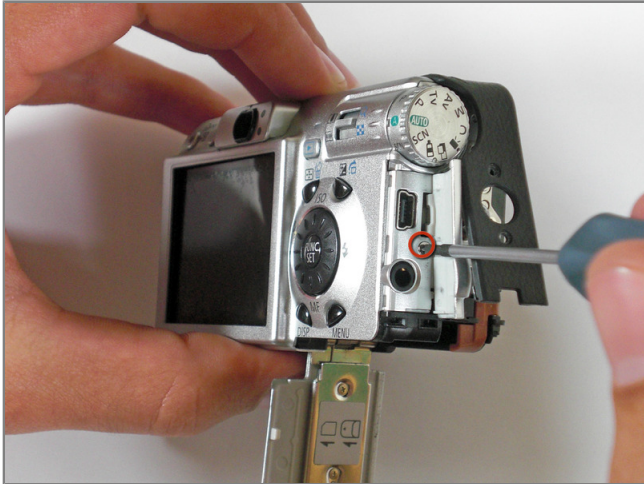

Step 4

- Open the "A/V Out Digital" cover slide, and remove the screw inside.
- Gently pull off the back casing.
- Remove the black "L" shaped piece of metal.

